


Easy Installation:

- Replaces any 3/4" keyed cam lock
- 1 Cam upon request
- Can be set to rotate clockwise or counterclockwise

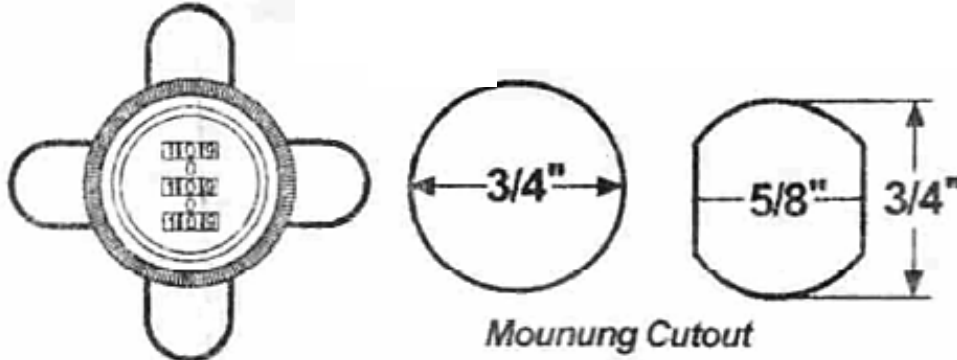

Set your own combination



1,000 Combinations possible.
Changing the combination
only takes a few seconds
with a simple push of the
change button.

Change Button

Easy Instructions to reset combination at any

- Combination must be on opening number prior to resetting (factory default is 0-0-0)
- On the underside outer edge of the lock, there is a hole for the code reset button. Rotate the face of the cam until the code reset button comes into view
- Push this pin in with a paper clip and keep it pushed in.
- Set your personal combination by turning the dials to the desired combination.
Release the reset button and your combination is set.
To lock, close the lock and rotate the lock to the
- "locked" position. Rotate one or more dials after the lock is closed. To open the lock, set your personal combination