


# TEMPLATE

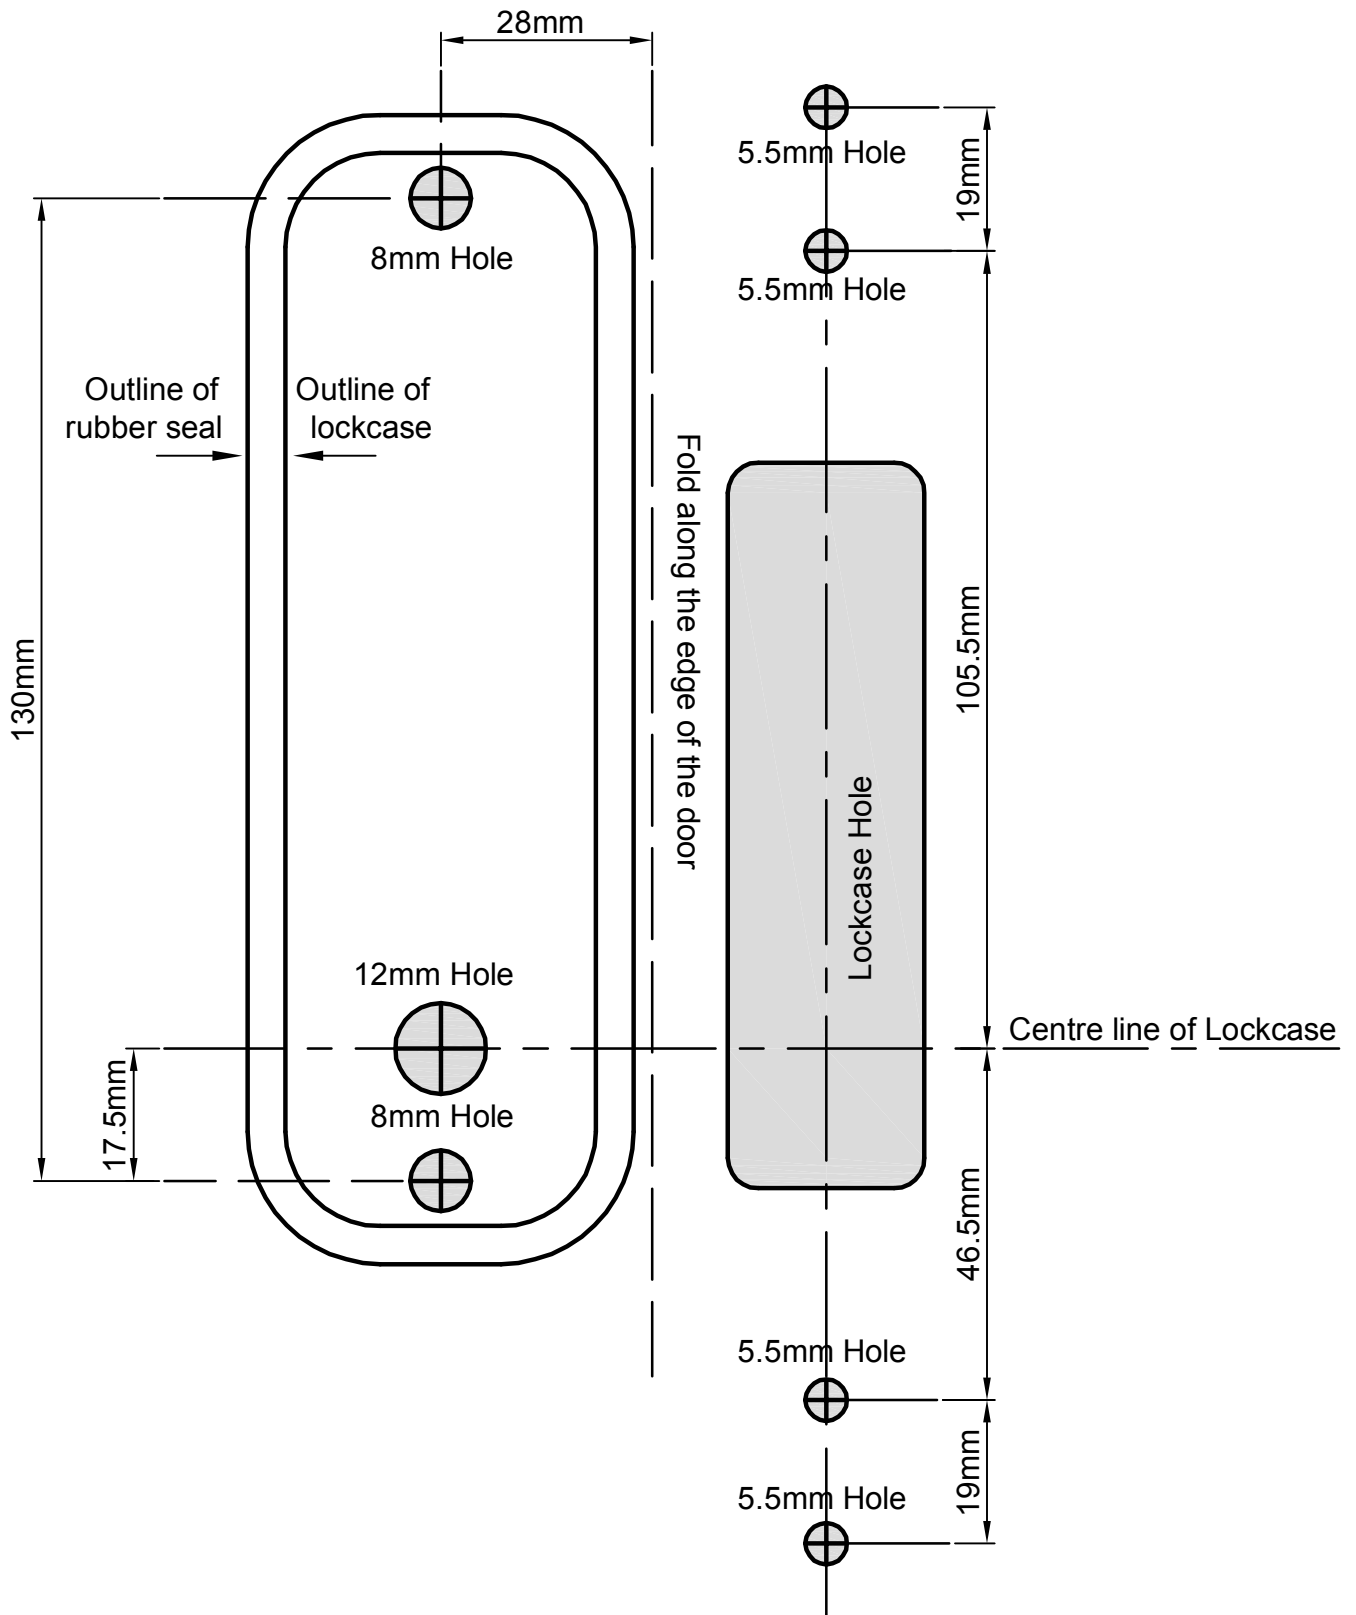

- Mark centre line on door fore-end.
- Tape drilling template onto door fore-end aligning the door centre line with that on the template.
- Drill the three holes for the keypad fixings.
  - 2 holes at  $\phi 8\text{mm}$
  - 1 hole at  $\phi 12\text{mm}$
- Drill position of fixing tab holes
- Drill out and clear section marked as Lockcase boby.
- Secure fixing tabs into door and install latch.
- Install face plate onto latch.

N • B • Spacers are provided to allow for adjustment of latch position on door.

**The optimum gap between door and frame is 4mm.**